


#### PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION


#### IMPORTANT INSTALLATION INFORMATION


- Before commencing installation or maintenance, ensure electricity is switched off at the mains. Installation or maintenance should be carried out by a qualified electrician.
- 2. The luminaire must not, under any circumstances, be installed directly to flammable materials, and luminaires must not be covered with any flammable materials.
- **3.**Mounting height range of 3 meters to 6 meters, this model is suitable for outdoor lighting.
- **4.**Ensure there is adequate free air circulation of at least 50cm around the luminaire. All luminaires run hot. It is the installer's responsibility to consider fire risk and take appropriate precautions.

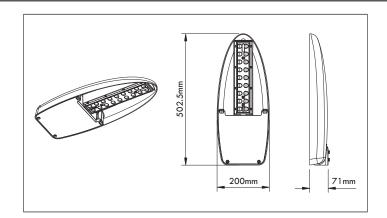



# LEAVE A COPY FOR THE USER / MAINTENANCE ENGINEER FOR FUTURE REFERENCE


## Installation Instruction & Installation Steps

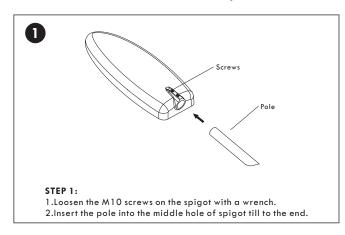

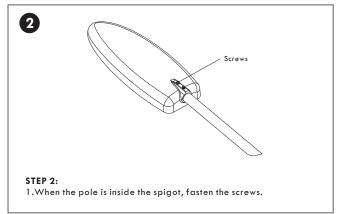


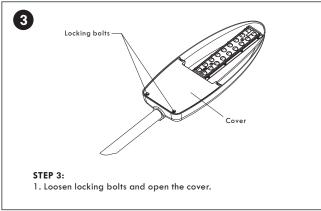

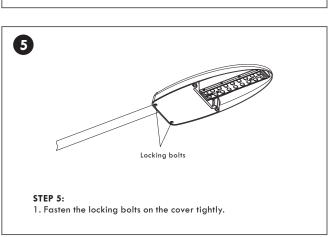


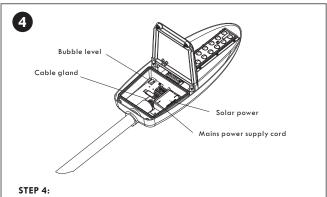

- Get mains power supply cord into led driver compartment via cable gland.
- 2. Lock the gland to mains power supply cord tightly.
- 3. For more details about wiring, please refer to the wiring instruction, See Figure 6.

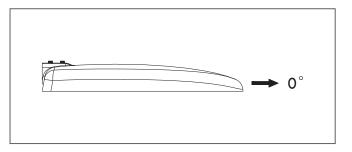



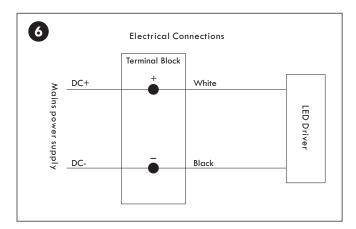

#### WIRING INSTRUCTION

STEP I: Connect the White wire in the mains power supply cord to the "+" marked hole In the terminal block and tighten the connection properly.

STEP II: Connect the Black wire in the mains power supply cord to the "—" marked hole in the terminal block and tighten the connection properly.

## Main specifications

Model No.	System Wattage	Dimensions (L x W x H)	Weight	EPA*	Ambient Temperature	Ingress Protection	
SL040MAKO12V	40W	502.5mm (19.78") x 200mm (7.87") x 71mm (2.80")	5.88kg (12.9lbs)	0.076m²	-40°C to +50°C	IP67	
Input Voltage: DC12V							

## Common causes and solution

Encountered Problem	Possible Cause	Remedy	
	Internal wire disconnected	Open fixture and locate loose wires, reconnect connectors or wires and close cover. And retest.  Open fixture and check for disconnected wiring. If all wires are fine, replace LED driver with new one and test.	
Module does not light up	LED driver failure		
	Module Failure	If all the above remedies are trialed then the light module has most likely failed. Contact us for replacement and warranty information.	